


Connector Pinouts

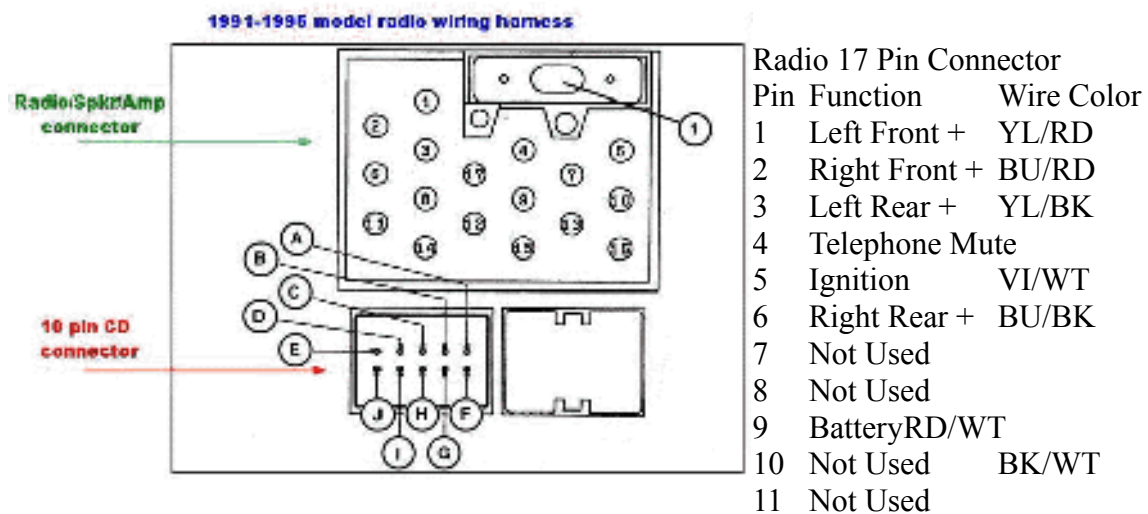

- 12 Left - YL/GY
- 13 Illumination GY/BK
- 14 Right - BU/GY
- 15 Ground BR
- 16 Power Antenna WT
- 17 Not Used

CD 10 Pin Connector

- | Pin | Function |
|-----|----------------------|
| A | Data |
| B | Enable |
| C | Digital Ground |
| D | Right Channel Ground |
| E | Left Channel Ground |
| F | Clock |
| G | Reset |
| H | Ground |
| I | Right Channel |
| J | Left Channel |